

# LECTURE HALL PRESENTATION GUIDE

## COMPUTER (HDMI/VGA/DISPLAYPORT/MINI HDMI/MHL)

- Turn on the Projector using the white Epson remote control
  - The projector will "click", then the light will turn on
  - The projector screen will drop down after about 15 seconds
- Turn on the Yamaha receiver (upper left button on Receiver)
- Rotate the input dial on the left to HDMI3 (Computer)
- Plug in the white HDMI cable coming from the receiver to your computer (or adaptor)
  - For (VGA)
    - connect the VGA Adaptor to your computer
    - connect the USB port for power (may need to use usb extension)
    - connect the audio (may need to use audio extension)
    - connect the VGA Adaptor to the white HDMI cable
  - For (DisplayPort)
    - connect the DisplayPort Adaptor to your computer
    - connect the DisplayPort Adaptor to the white HDMI cable
  - For (Mini HDMI)
    - connect the Mini HDMI cable to your computer
    - connect the Mini HDMI cable to the white HDMI cable
  - For (MHL/Android)
    - connect the MHL cable to your device
    - connect the MHL cable to the white HDMI cable
- Adjust the volume by turning the right dial on the receiver

When you are done:

- Disconnect the white HDMI cable from your computer or adaptor
- Put any adaptors and their cables back in the box
- Turn off the Receiver (upper left button on Receiver)
- Turn off the Projector (Turning it off will increase the life of the bulb)
  - The projector will turn off and the screen will automatically retract after 5 minutes
  - Wait for it to turn off, or press the power button on the white Epson remote control

## COMPOSITE (FRONT PANEL YELLOW/RED/WHITE RCA)

- Turn on the Projector using the white Epson remote control
  - The projector will "click", then the light will turn on
  - The projector screen will drop down after about 15 seconds
- Turn on the Yamaha receiver (upper left button on Receiver)
- Rotate the Input dial on the left to V-AUX
- Adjust the volume by turning the right dial on the receiver

When you are done

- Turn off the Receiver (upper left button on Receiver)
- Turn off the Projector (Turning it off will increase the life of the bulb)
  - The projector will turn off and the screen will automatically retract after 5 minutes
  - Wait for it to turn off, or press the power button on the white Epson remote control

## CHROMECAST

- Turn on the Projector using the white Epson remote control
  - The projector will "click", then the light will turn on
  - The projector screen will drop down after about 15 seconds
- Turn on the Yamaha receiver (upper left button on Receiver)
- Connect to the Chromecast named "Lecture Hall"
- Rotate the Input dial on the left to HDMI2 (Chromecast)
- Adjust the volume
  - Turn the right dial on the receiver
  - Use the volume controls on the Chromecast client

When you are done

- Turn off the Receiver (upper left button on Receiver)
- Turn off the Projector (Turning it off will increase the life of the bulb)
  - The projector will turn off and the screen will automatically retract after 5 minutes
  - Wait for it to turn off, or press the power button on the white Epson remote control

## BLU-RAY OR DVD

- Turn on the Projector using the white Epson remote control
  - The projector will "click", then the light will turn on
  - The projector screen will drop down after about 15 seconds
- Turn on the Yamaha receiver (upper left button on Receiver)
- Turn on the Sony Blu-ray player (upper left button on player)
- Insert Blu-ray or DVD disk (upper right button on player)
- Rotate the Input dial on the left to HDMI1 (Blu-ray)
- Adjust the volume by turning the Volume dial on the right

When you are done:

- Eject Blu-ray or DVD disk (upper right button on player)
- Turn off the Blu-ray player (upper left button on player)
- Turn off the Receiver (upper left button on Receiver)
- Turn off the Projector (Turning it off will increase the life of the bulb)
  - The projector will turn off and the screen will automatically retract after 5 minutes
  - Wait for it to turn off, or press the power button on the white Epson remote control