

TO OPERATE MACHINE

Place piece to be tested on anvil, turn hand wheel till you make 3 turns of the indicator's large hand. Set reading hand of indicator to zero. Then trip lever away from you with thumb. When reading hand has come to rest, bring lever slowly forward and make reading of hardness number.

TO OIL SCREW

To insure long wear of screw when in continual use, run screw down into oil reservoir underneath instrument, at least once every week.

For best results use oil that is recommended by manufacturer of this instrument.

PATENTS APPLIED FOR

CLARK INSTRUMENT, INC.

251 FORD ROAD

DEARBORN, MICH.