Babylock Zest Sewing Machine

| Name | Zest Sewing Machine | | |
|--------------|----------------------------|--|--|
| Training | Training Required | | |
| Manufacturer | Babylock | | |
| Description | Sewing Machine- Lockstitch | | |


blocked URL

Training is required. After training, users should know:

- · Identify basic parts of the sewing machine
- Understand how a stitch is formed
- Understand thread tension
- Understand needle selection
- Machine operation (below)

Machine Operation Refresher Videos

1. Change needle

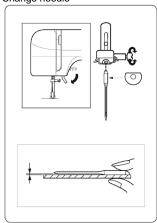

Changing the Needle

CAUTION:

Turn OFF the power switch before changing the needle.

Raise the needle to its highest position by turning the handwheel counterclockwise.

A loose needle or a loose screw may cause machine malfunction or needle to break.

Loosen the needle clamp screw by turning it counterclockwise. Remove the needle from the needle clamp.

Insert a new needle into the needle clamp with

the flat side to the rear. When inserting the needle into the needle clamp, push it up as far as it will

Tighten the needle clamp screw firmly by turning it clockwise.

- Needle clamp screw
 Flat side

Checking the needle
To see if the needle is in good condition, place the
flat side of the needle onto something flat (needle
plate, glass etc.). The gap between the needle and the flat surface should be consistent. Never use a bent or blunt needle.

A damaged needle can cause permanent snags or runs in knits, fine silks and silk-like fabrics.

- 2. Wind bobbin
- 3. Thread Lower machine
- 4. Thread upper machine & bring up thread
- 5. Start/end seams
- 6. Reverse
- 7. Cornering
- 8. Change stitch length or width

Related Pages

Machine Status

| Machine Number | Name | Status | Date Checked | Person Checking |
|-------------------|---------------|--------|-----------------|--------------------|
| 1 | Babylock Zest | | | |
| 2 | Babylock Zest | | | |
| 3 | Babylock Zest | | | |
| 4 | Babylock Zest | | | |
| 5 | Babylock Zest | | | |
| 6 | Babylock Zest | | | |